


# WM 962255 Replacing bulb for interior light

1. Carefully loosen interior light -1- with a small screwdriver -arrows A and B- and pull it down out of the front lock -arrow C- .

SuncoastParts.com

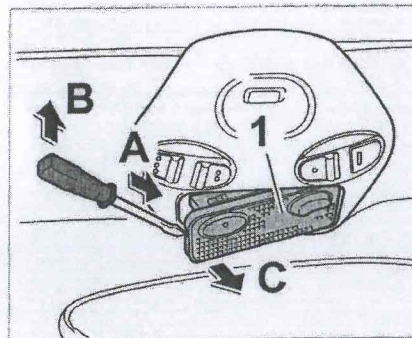


Removing interior light


2. Release connector -1- on the interior light -arrow a- and pull it off. -arrow- .

## Removing bulb for interior light

1. Loosen bulb holder with bayonet lock -1- from the interior light -direction of arrow- and remove it.
2. Take bulb out of the bulb socket.

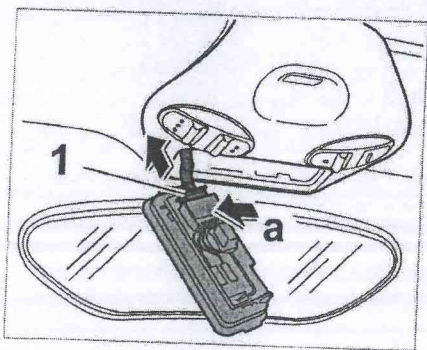

Pulling off connector on interior light

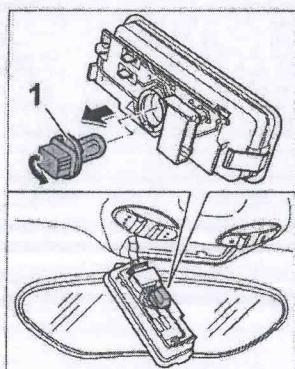

Removing bulb

### NOTICE

#### Incorrect handling of bulbs

- Risk of damage to bulbs and the bulb housing

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.

## Installing bulb for door warning light

### moving footwell light

#### NOTICE

#### Correct handling of bulbs

Risk of damage to bulbs and the bulb housing

Switch off ignition and remove ignition key.

Switch off the relevant loads when changing bulbs.


Only use bulbs listed in the bulb table.

Only install clean bulbs that are free of grease.


Always use a cloth or soft paper when working with bulbs.

Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.

In certain states, it is compulsory to carry spare light bulbs.

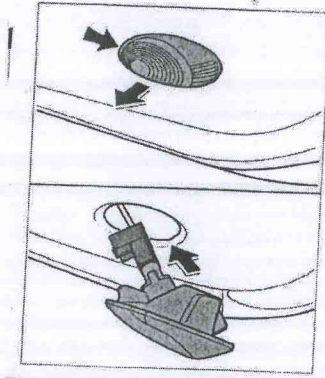

Removing door warning light

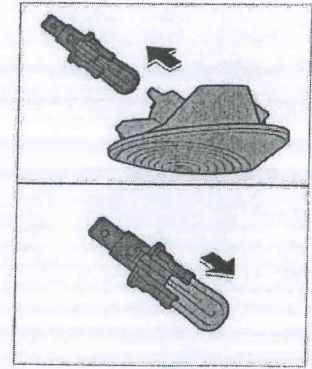


Removing bulb for door warning light

1. Push door warning light carefully out of the door trim via the cutaway **-arrow-** using a screwdriver.
2. Pull off door warning light connector and remove light.


### Removing bulb for door warning light

1. Remove bulb socket from the door warning light and remove bulb.

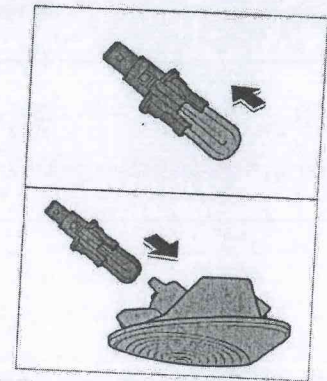

Installing bulb for door warning light

1. Insert new bulb in the bulb socket and insert the socket into the door warning light opening.

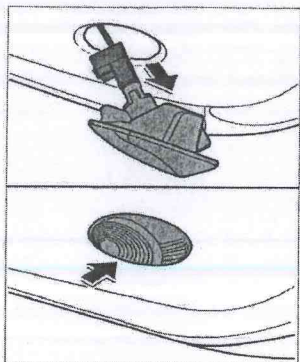

Installing door warning light


1. Push connector on to door warning light.
2. Press door warning light into door trim panel.

# WM 964019 Removing and installing luggage compartment light in rear lid


## Removing luggage compartment light in rear lid

### Removing luggage compartment light in rear lid


1. Switch off ignition and remove ignition key.
2. Use a plastic spatula or screwdriver to prise out the light in the trim panel of the rear lid.

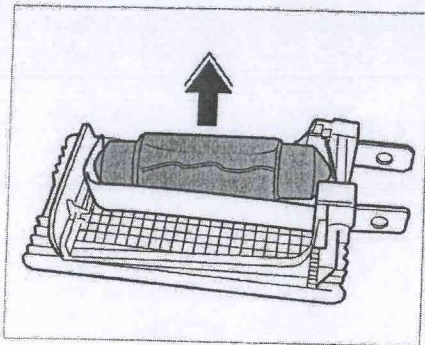

Removing bulb for light

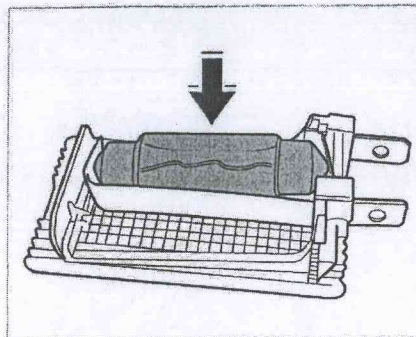

Installing bulb for light

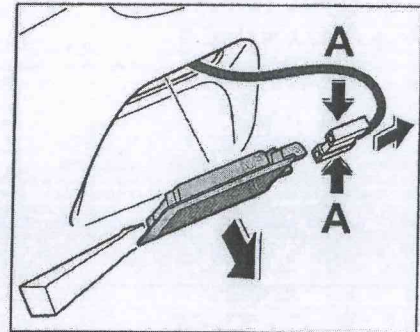


Unclipping light

## Installing luggage compartment light in rear lid

### Installing luggage compartment light in rear lid

1. Push in plug until it is felt to engage.

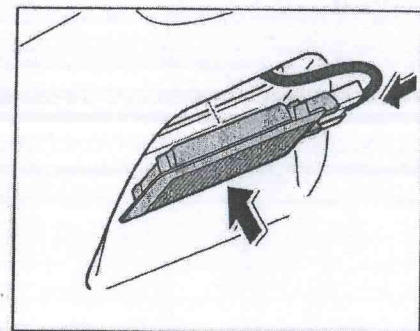

#### NOTICE

##### Incorrect handling of bulbs

- Risk of damage to bulbs and the bulb housing

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.