


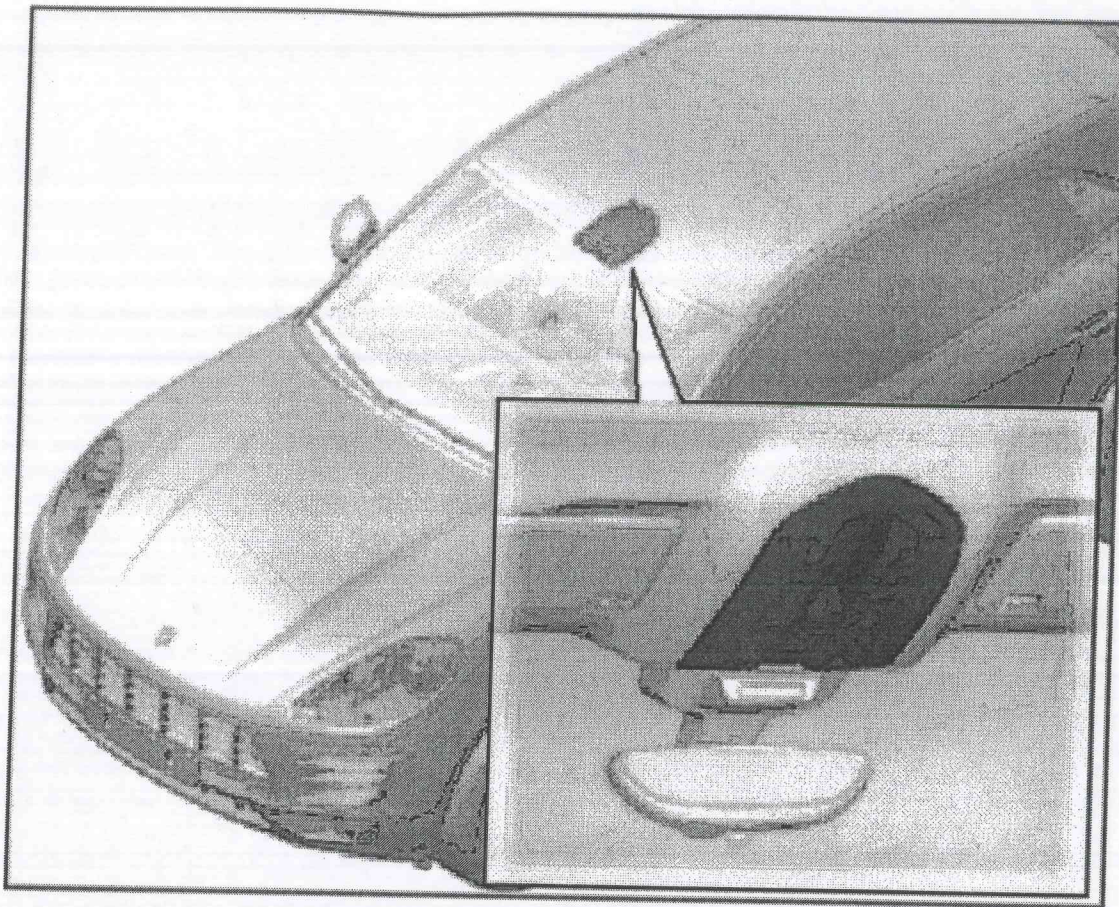

Installation position of roof trim panel

Installation of Front Dome Lights

Recommended tools:


- Trim Removal Tool
- Small Flat-Head Screw Driver
- Needle Nose Pliers (some applications)

NOTE: Before installing, make sure the ignition is off and all dome lights are off.


This installation is for skilled or professional installation. Improper installation can result in damage of the expensive headliner or electrical system. Use caution, consult a professional. This guide is for reference only, Suncoast is not responsible for any damage or loss caused by incorrect installation.

Front Overhead Console Removal


- 1) Remove Console Outer Trim - Unclip overhead console outer trim. This piece is in interior color, black, grey, beige, etc.. This piece has multiple clips around the edge of the overhead light console.
- 2) Remove Console - Unclip light console, release clips shown as "A" in this illustration. Once release, swivel the assembly down to gain access to the two light bulbs.
- 3) Remove the Bulbs - Limited space is available to remove the bulbs, this can be difficult. The bulbs are located in the middle of the housing, the bulb holder sockets are rectangular and black or white. Twist the bulb sockets to release the socket, it requires a 90 degrees twist. For most models, this it's easy to twist. Some models may be more difficult to turn, in this situation pliers or strong hands will be required to do so. Once removed, swap the incandescent bulb to the new LED version. Install both bulbs into the bulb holders, reinsert into the console and make sure they twist and lock into place. Test the lights before reinstalling the console.
- 4) Install the Console - Once the lights are functioning properly and the new bulbs are securely in place, gently swivel the console upwards, back into the roof panel until it's securely fastened. Check the gap and gap dimensions.
- 5).Install Console Outer Trim - Snap the outer trim frame in place. Start with the front most portion, make sure the front alignment tabs are installed properly. Then connect all of the tiny clips around the console assembly and make sure all gaps are correct.

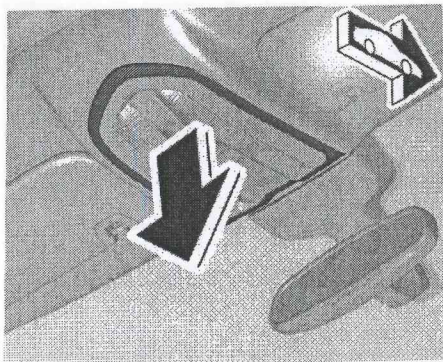


Unclipping trim

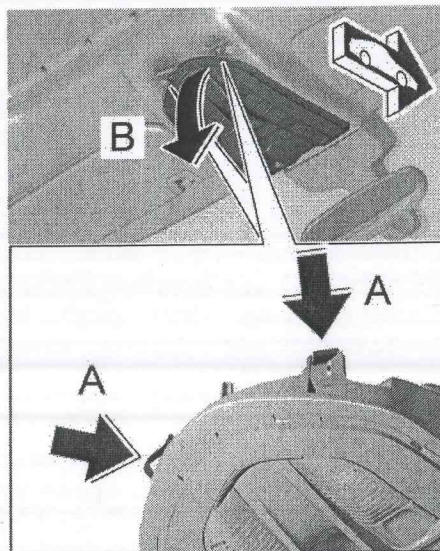

Unclipping headliner

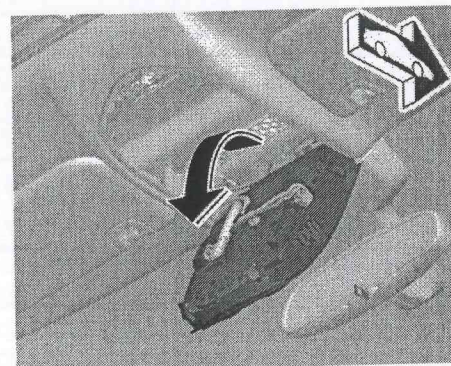

Lifting off headliner

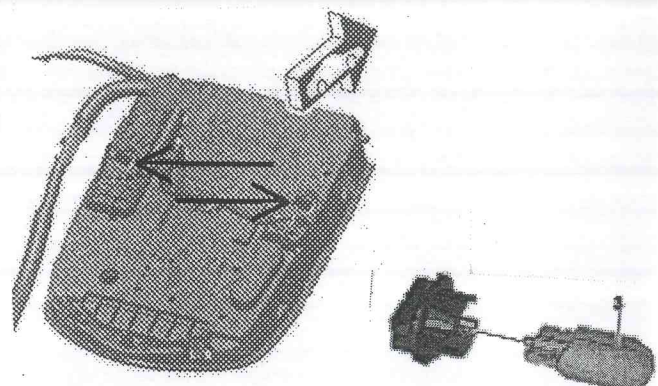

Twist socket 90°

Installation of Rear Dome Lights

Recommended tools:


- Trim Removal Tool
- Small Flat-Head Screw Driver

NOTE: Before installing, make sure the ignition is off and all dome lights are off.

This installation is for skilled or professional installation. Improper installation can result in damage of the expensive headliner or electrical system. Use caution, consult a professional. This guide is for reference only, Suncoast is not responsible for any damage or loss caused by incorrect installation.

Removing Reading Light


1) Remove the housing - Release mounting clips. Use a trim removal tool to release the light housing clips. Each light housing has three clips, one on the top, bottom, and side (usually the side facing the front of the car). Gently depress these clips to release the light housing. Use caution to avoid damaging the headliner. On some cars this can be difficult to remove, be patient and gentle!

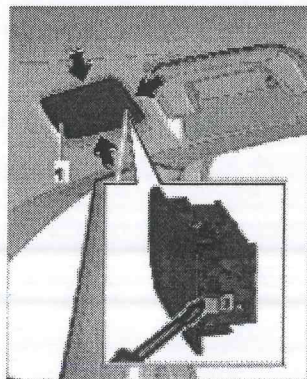

Removing reading light

2| Swap Bulbs - Turn the bulb socket 90 degrees and the socket will release. Remove the bulb from the socket and install the new LED version. Re-install the bulb socket to the bulb housing and test the operation.

3| Re-install the housing - Once the light is functioning properly, reinstall the light housing in the reverse order. Be careful not to damage the headliner. Once installed, check all gaps.

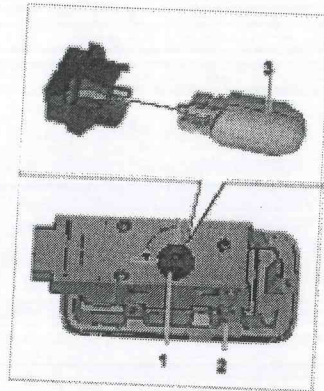

Removing bulb

SuncoastParts.com