


WM 962255 Replacing bulb for interior light

1. Carefully loosen interior light **-1-** with a small screwdriver **-arrows A and B-** and pull it down out of the front lock **-arrow C-**.

SuncoastParts.com

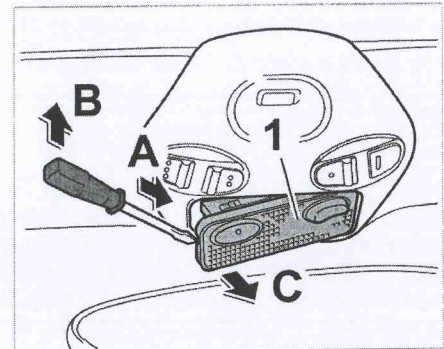


Removing interior light


2. Release connector **-1-** on the interior light **-arrow a-** and pull it off. **-arrow-**.

Removing bulb for interior light

1. Loosen bulb holder with bayonet lock **-1-** from the interior light **-direction of arrow-** and remove it.
2. Take bulb out of the bulb socket.

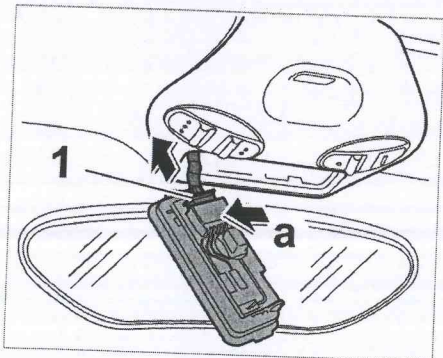

Pulling off connector on interior light

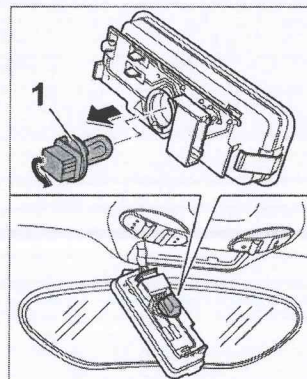

Removing bulb

NOTICE

Incorrect handling of bulbs


- Risk of damage to bulbs and the bulb housing

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.

Installing luggage compartment light

Removing bulb for light

1. Remove bulb from between the contact springs.

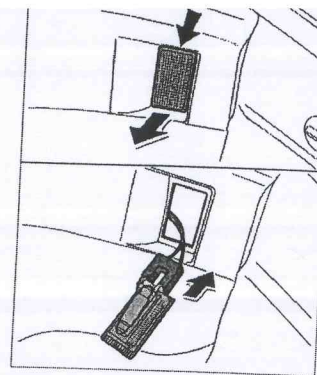


Removing luggage compartment light


1. Press luggage compartment light carefully out of the luggage compartment trim at the cutout -arrow- using a screwdriver.
2. Pull off plug on luggage compartment light and remove luggage compartment light.

Installing bulb for light

1. Insert new bulb into the contact springs.

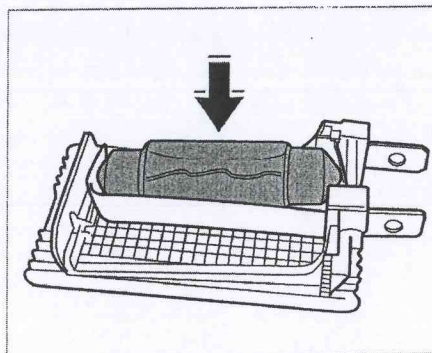


Installing bulb for light

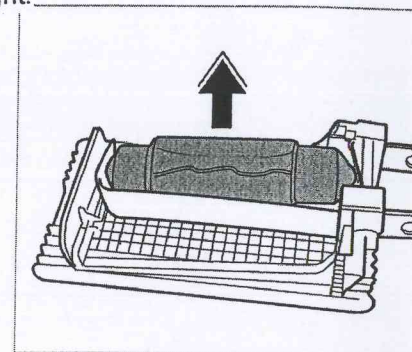

Removing bulb for light

1. Attach plug on luggage compartment light.
2. Insert light into opening and clip it into the trim panel. Check that light is fitted securely.

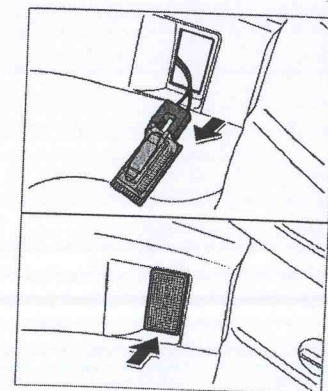

Installing luggage compartment light

SuncoastParts.com

NOTICE

Incorrect handling of bulbs

- Risk of damage to bulbs and the bulb housing

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.

Removing footwell light

Removing glove compartment light

NOTICE


Incorrect handling of bulbs

- Risk of damage to bulbs and the bulb housing

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.

1. Carefully Press footwell light out of the trim panel at the cut-out **-arrow-** using a screwdriver.

SuncoastParts.com

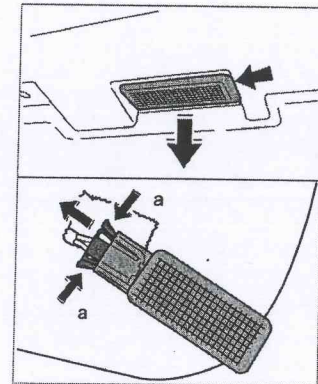


Removing footwell light

2. Release connector on footwell light **-arrows a-** and pull it off.
3. Remove footwell light.

Installing footwell light

1. Push plug on to footwell light until the plug is felt to engage.

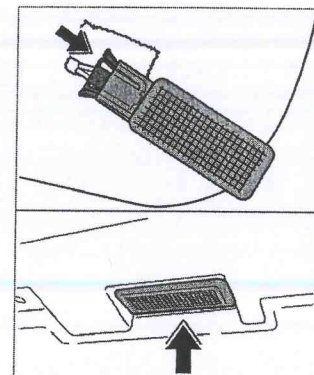

Installing footwell light

2. Press footwell light into trim panel.

Installing bulb for door warning light

moving footwell light

NOTICE

Correct handling of bulbs

Risk of damage to bulbs and the bulb housing

Switch off ignition and remove ignition key.

Switch off the relevant loads when changing bulbs.


Only use bulbs listed in the bulb table.

Only install clean bulbs that are free of grease.


Always use a cloth or soft paper when working with bulbs.

Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.

In certain states, it is compulsory to carry spare light bulbs.

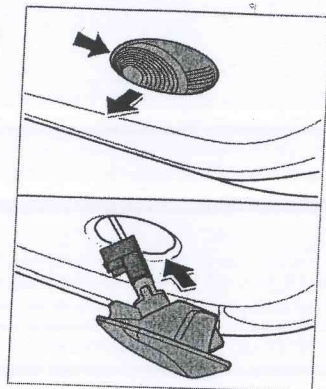

Removing door warning light

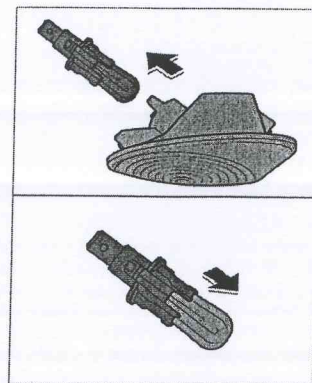


Removing bulb for door warning light

1. Push door warning light carefully out of the door trim via the cutaway **-arrow-** using a screwdriver.
2. Pull off door warning light connector and remove light.

Removing bulb for door warning light


1. Remove bulb socket from the door warning light and remove bulb.

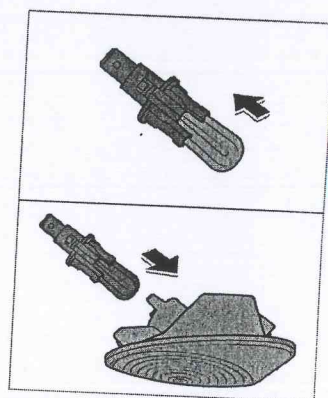

Installing bulb for door warning light

SuncoastParts.com

1. Insert new bulb in the bulb socket and insert the socket into the door warning light opening.

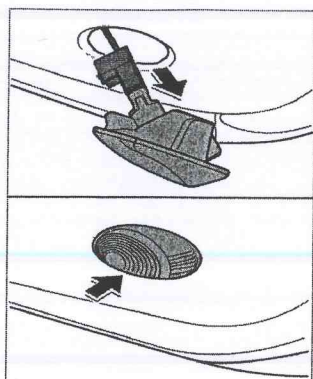

Installing door warning light

1. Push connector on to door warning light.
2. Press door warning light into door trim panel.