




Removing and installing bulb for reading light

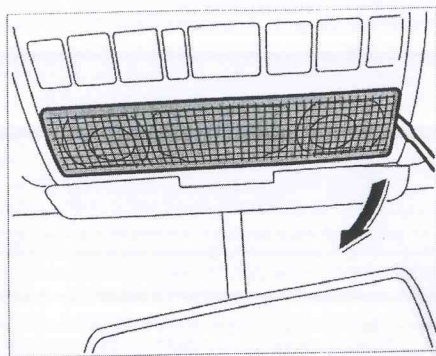

Levering out light cover

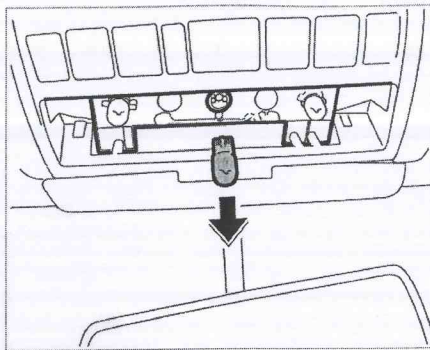


Pulling out middle bulb

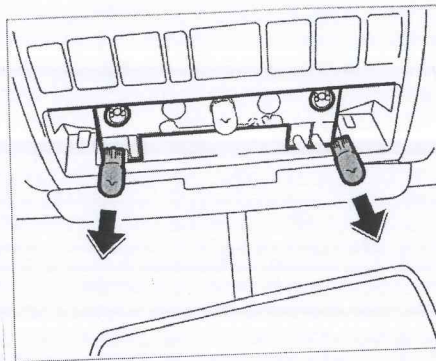


Removing bulb on left/right

SuncoastParts.com

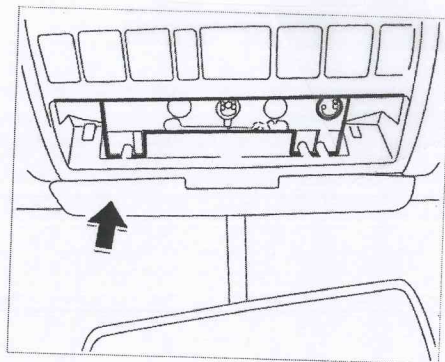

Installing bulb

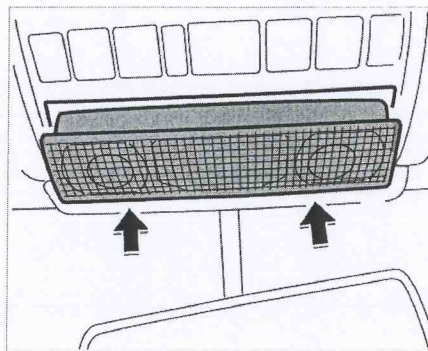

Positioning the cover

1. Switch off ignition and remove ignition key.
2. Use a plastic spatula or screwdriver to prise out the light cover.
3. Remove the defective bulb on the left or right.


SuncoastParts.com

Risk of damage to bulbs and the bulb housing

Switch off ignition and remove ignition key.
Switch off the relevant loads when changing bulbs.
Only use bulbs listed in the bulb table.
Only install clean bulbs that are free of grease.
Always use a cloth or soft paper when working with bulbs.
Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
In certain states, it is compulsory to carry spare light bulbs.


Removing bulb for reading light in back seat area

1. Switch off ignition and remove ignition key.
2. Use a plastic spatula or screwdriver to prise out the light cover.

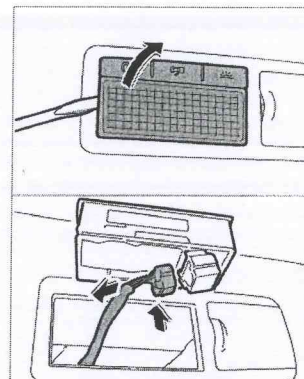

Levering out light cover and pulling off plug

3. Press the electric plug in and pull off the plug.
4. Remove the light unit and take off the cover.

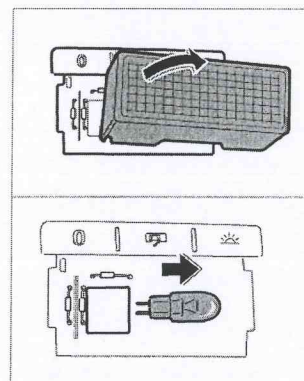

Removing light unit, taking off the cover and removing bulb

5. Remove the bulb from the holder.

Risk of damage to bulbs and the bulb housing

Switch off ignition and remove ignition key.

Switch off the relevant loads when changing bulbs.

Only use bulbs listed in the bulb table.

Only install clean bulbs that are free of grease.


Always use a cloth or soft paper when working with bulbs.

Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.

In certain states, it is compulsory to carry spare light bulbs.


Removing and installing bulb for luggage compartment light

1. Switch off ignition and remove ignition key.
2. Use a plastic spatula or screwdriver to lever out the light cover -N- .

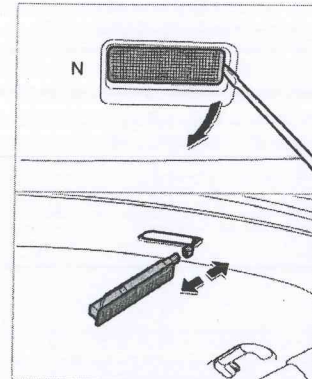

Removing light cover

3. Pull off electric plug.
4. Open cover on the plug side using a screwdriver and pivot up.

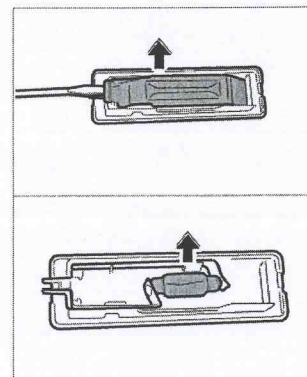

Opening and pivoting up cover

5. Remove bulb from holder.

Risk of damage to bulbs and the bulb housing

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.

Removing and installing bulb for luggage compartment light

Removing and installing bulb for glove compartment light

Removing and installing door warning light

Removing and installing bulb for floor light

Risk of damage to bulbs and the bulb housing

Switch off ignition and remove ignition key.




Switch off the relevant loads when changing bulbs.

Only use bulbs listed in the bulb table.

Only install clean bulbs that are free of grease.

Always use a cloth or soft paper when working with bulbs.

Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
In certain states, it is compulsory to carry spare light bulbs.

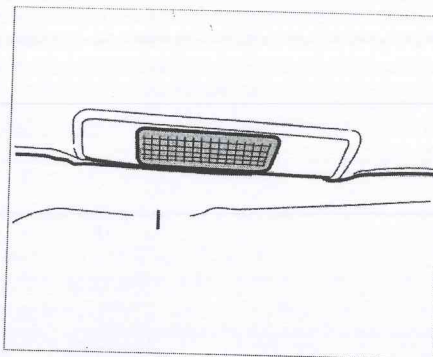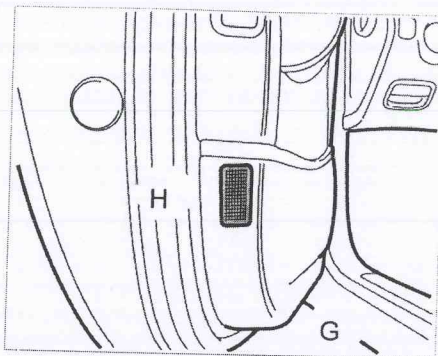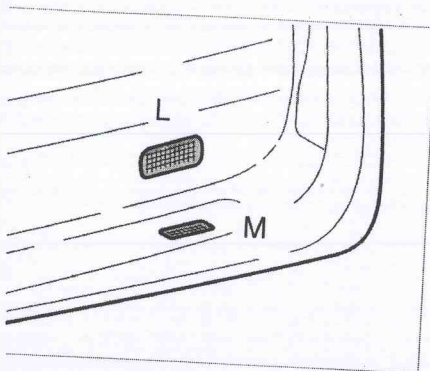


Removing door warning light,
luggage compartment lid

Removing front door warning light


Levering out rear footwell light

1. Switch off ignition and remove ignition key.
2. Use a plastic spatula or screwdriver to prise out the light
3. Pull out light, press connector together **-arrows a-** and remove it.


SuncoastParts.com

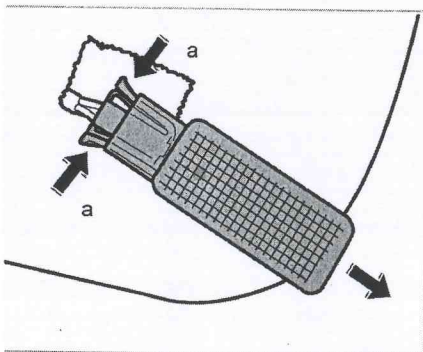


Disconnecting rear footwell light

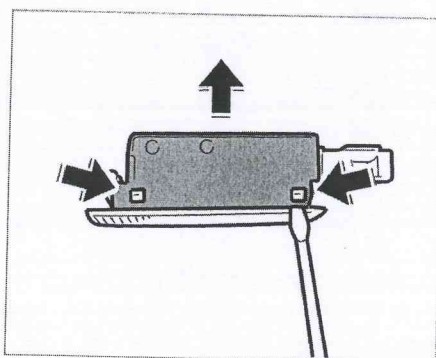


Levering off sheetmetal cover from
locking elements

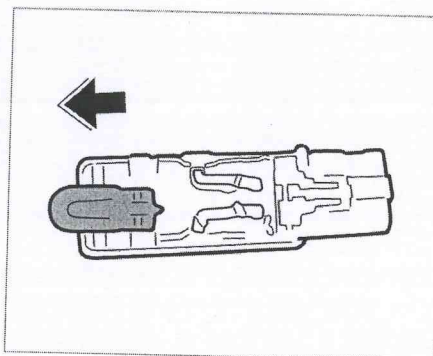


Pulling bulb out of holder

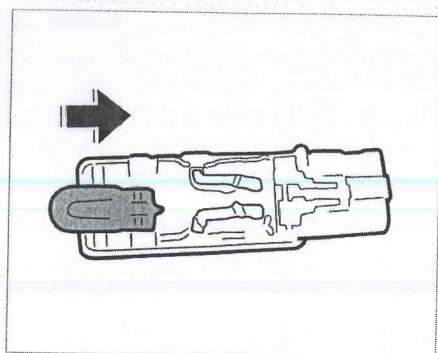

Inserting bulb into holder

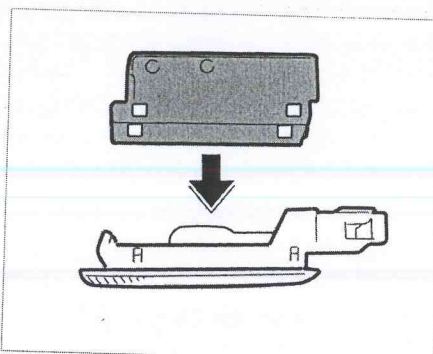

Positioning sheetmetal cover and
pressing into place

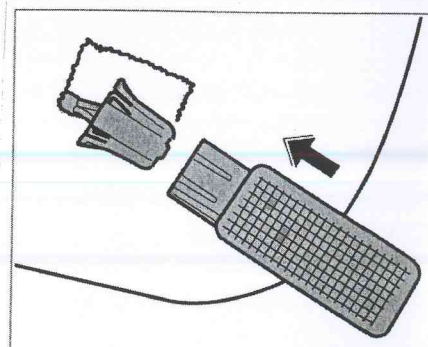

Inserting plug connection

SuncoastParts.com