The present document was valid at the time of print. A later version may be available online

WM 943119 Removing and installing tail light

 
Technical values

Location	Description	Туре	Basic value	Tolerance 1	Tolerance 2
Fastening screw for tail light		Tightening torque	2.0 Nm (1.5 ftlb.)	+10 %	-15 %

Removing tail light

Removing tail light

1. Remove rubber stopper -1- (-A-).




Removing rubber stopper

Visit SuncoastParts.com for wholesale Porsche parts.

Unscrew fastening screw 1- for the tail light sunsetautogroup.cc


1 - Fastening screw

 Nov 20, 2014



Removing tail light


Remove rubber stopper -1- in the wheel housing -A-. 2.

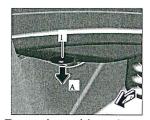

Removing rubber stopper


Insert a screwdriver through the opening -1- and position it on the removal surface of the light. Press the light out of the ball socket using a levering motion -A-.

 Secure the light from outside to prevent it from falling down.



Levering out tail light

Release electric plug connection -a- and pull it off -A-.

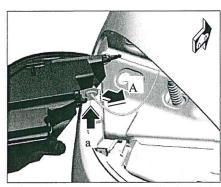


Electric plug connection for tail light

Installing tail light

Visit SuncoastParts.com for wholesale Porsche parts.


Installing tail light

1. Plug in electric plug connection -A- until the connector engages securely.

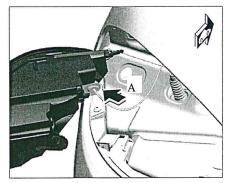

Connecting electric plug connection


2. Pre-position tail light **-1-** so that the T-bolts run into the guide rail. Slide in the tail light **-1-** and press it into the locking mechanism **-2-**.

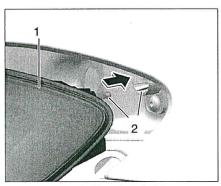

Installing tail light


3. Screw in fastening screw **-1-** for the tail light and tighten to <u>Tightening torque 2.0 Nm (1.5 ftlb.) +10 % -15 %</u>.

1 - Fastening screw

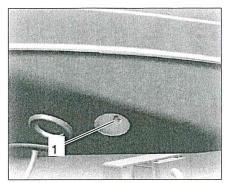


Securing tail light

Press in rubber stopper -1- (-A-).

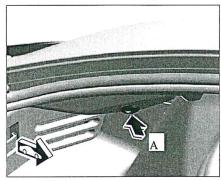

Pressing in rubber stopper

 4. Press rubber stopper -1- into the wheel housing -A-.



Pressing in rubber stopper

Visit SuncoastParts.com for wholesale Porsche parts.

Use this installation guide at your own risk. Professional installation is always recommended.

Model year as of 2012 C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C46, C96, C97, C98, C99