



Suncoast Parts Installation Guide

Fits 2013 or newer Boxster/Boxster S models:

Remove the filler trim:

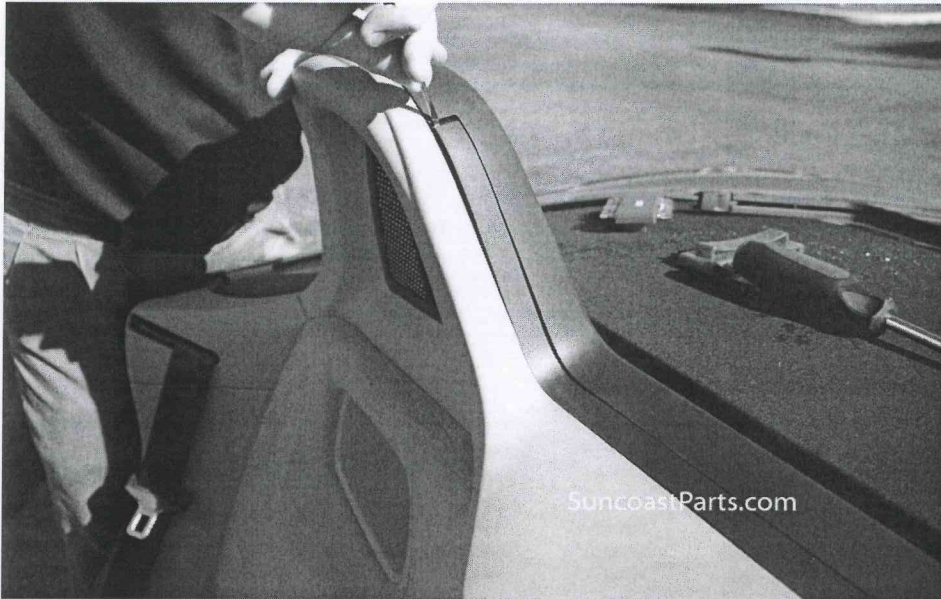

Remove the four securing bolts:

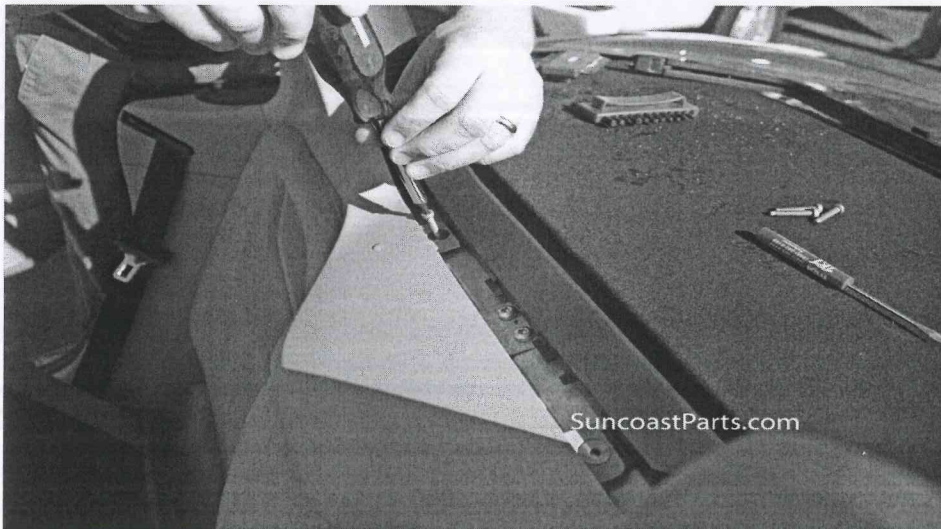


Gently pry apart the rollbar trim, just a small amount so you can insert the mounting guide:



Insert the mounting guide between the trim:



Tuck the upper portion of the guide behind the trim, make sure the upper button is flush with the trim when installed:

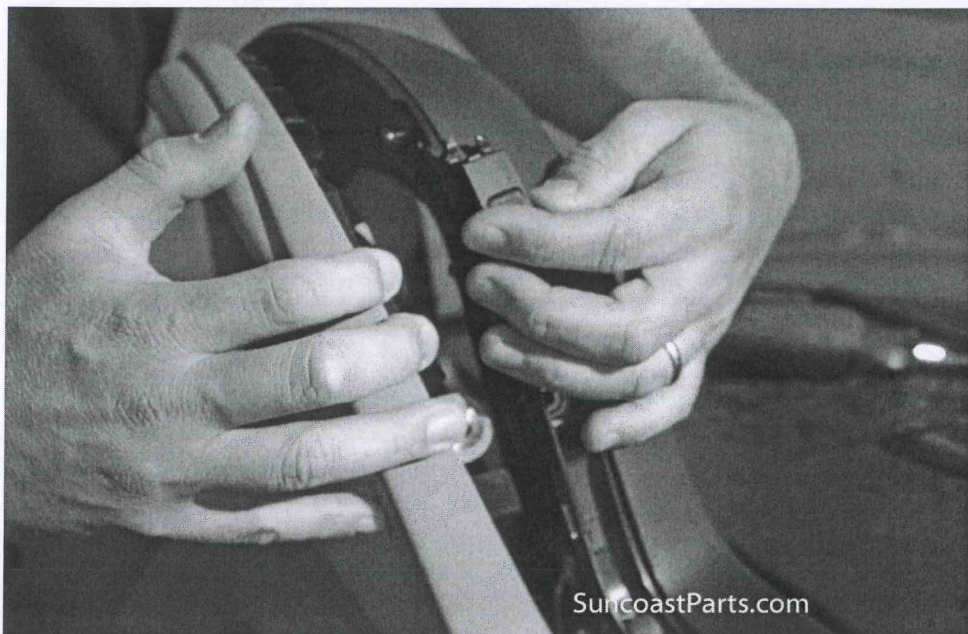

Once in place, squeeze the roll bar trims together. They should snap back into



Reattach the four securing bolts until they're snug.



Insert the wind deflector retaining trim, it will easily snap into place. Then you're finished!



The final step, line up the wind deflector and press it into place. Make sure the left and right side clip snap into place.



Installation guide is for reference only. If you're unsure of any steps, consult a qualified technician.